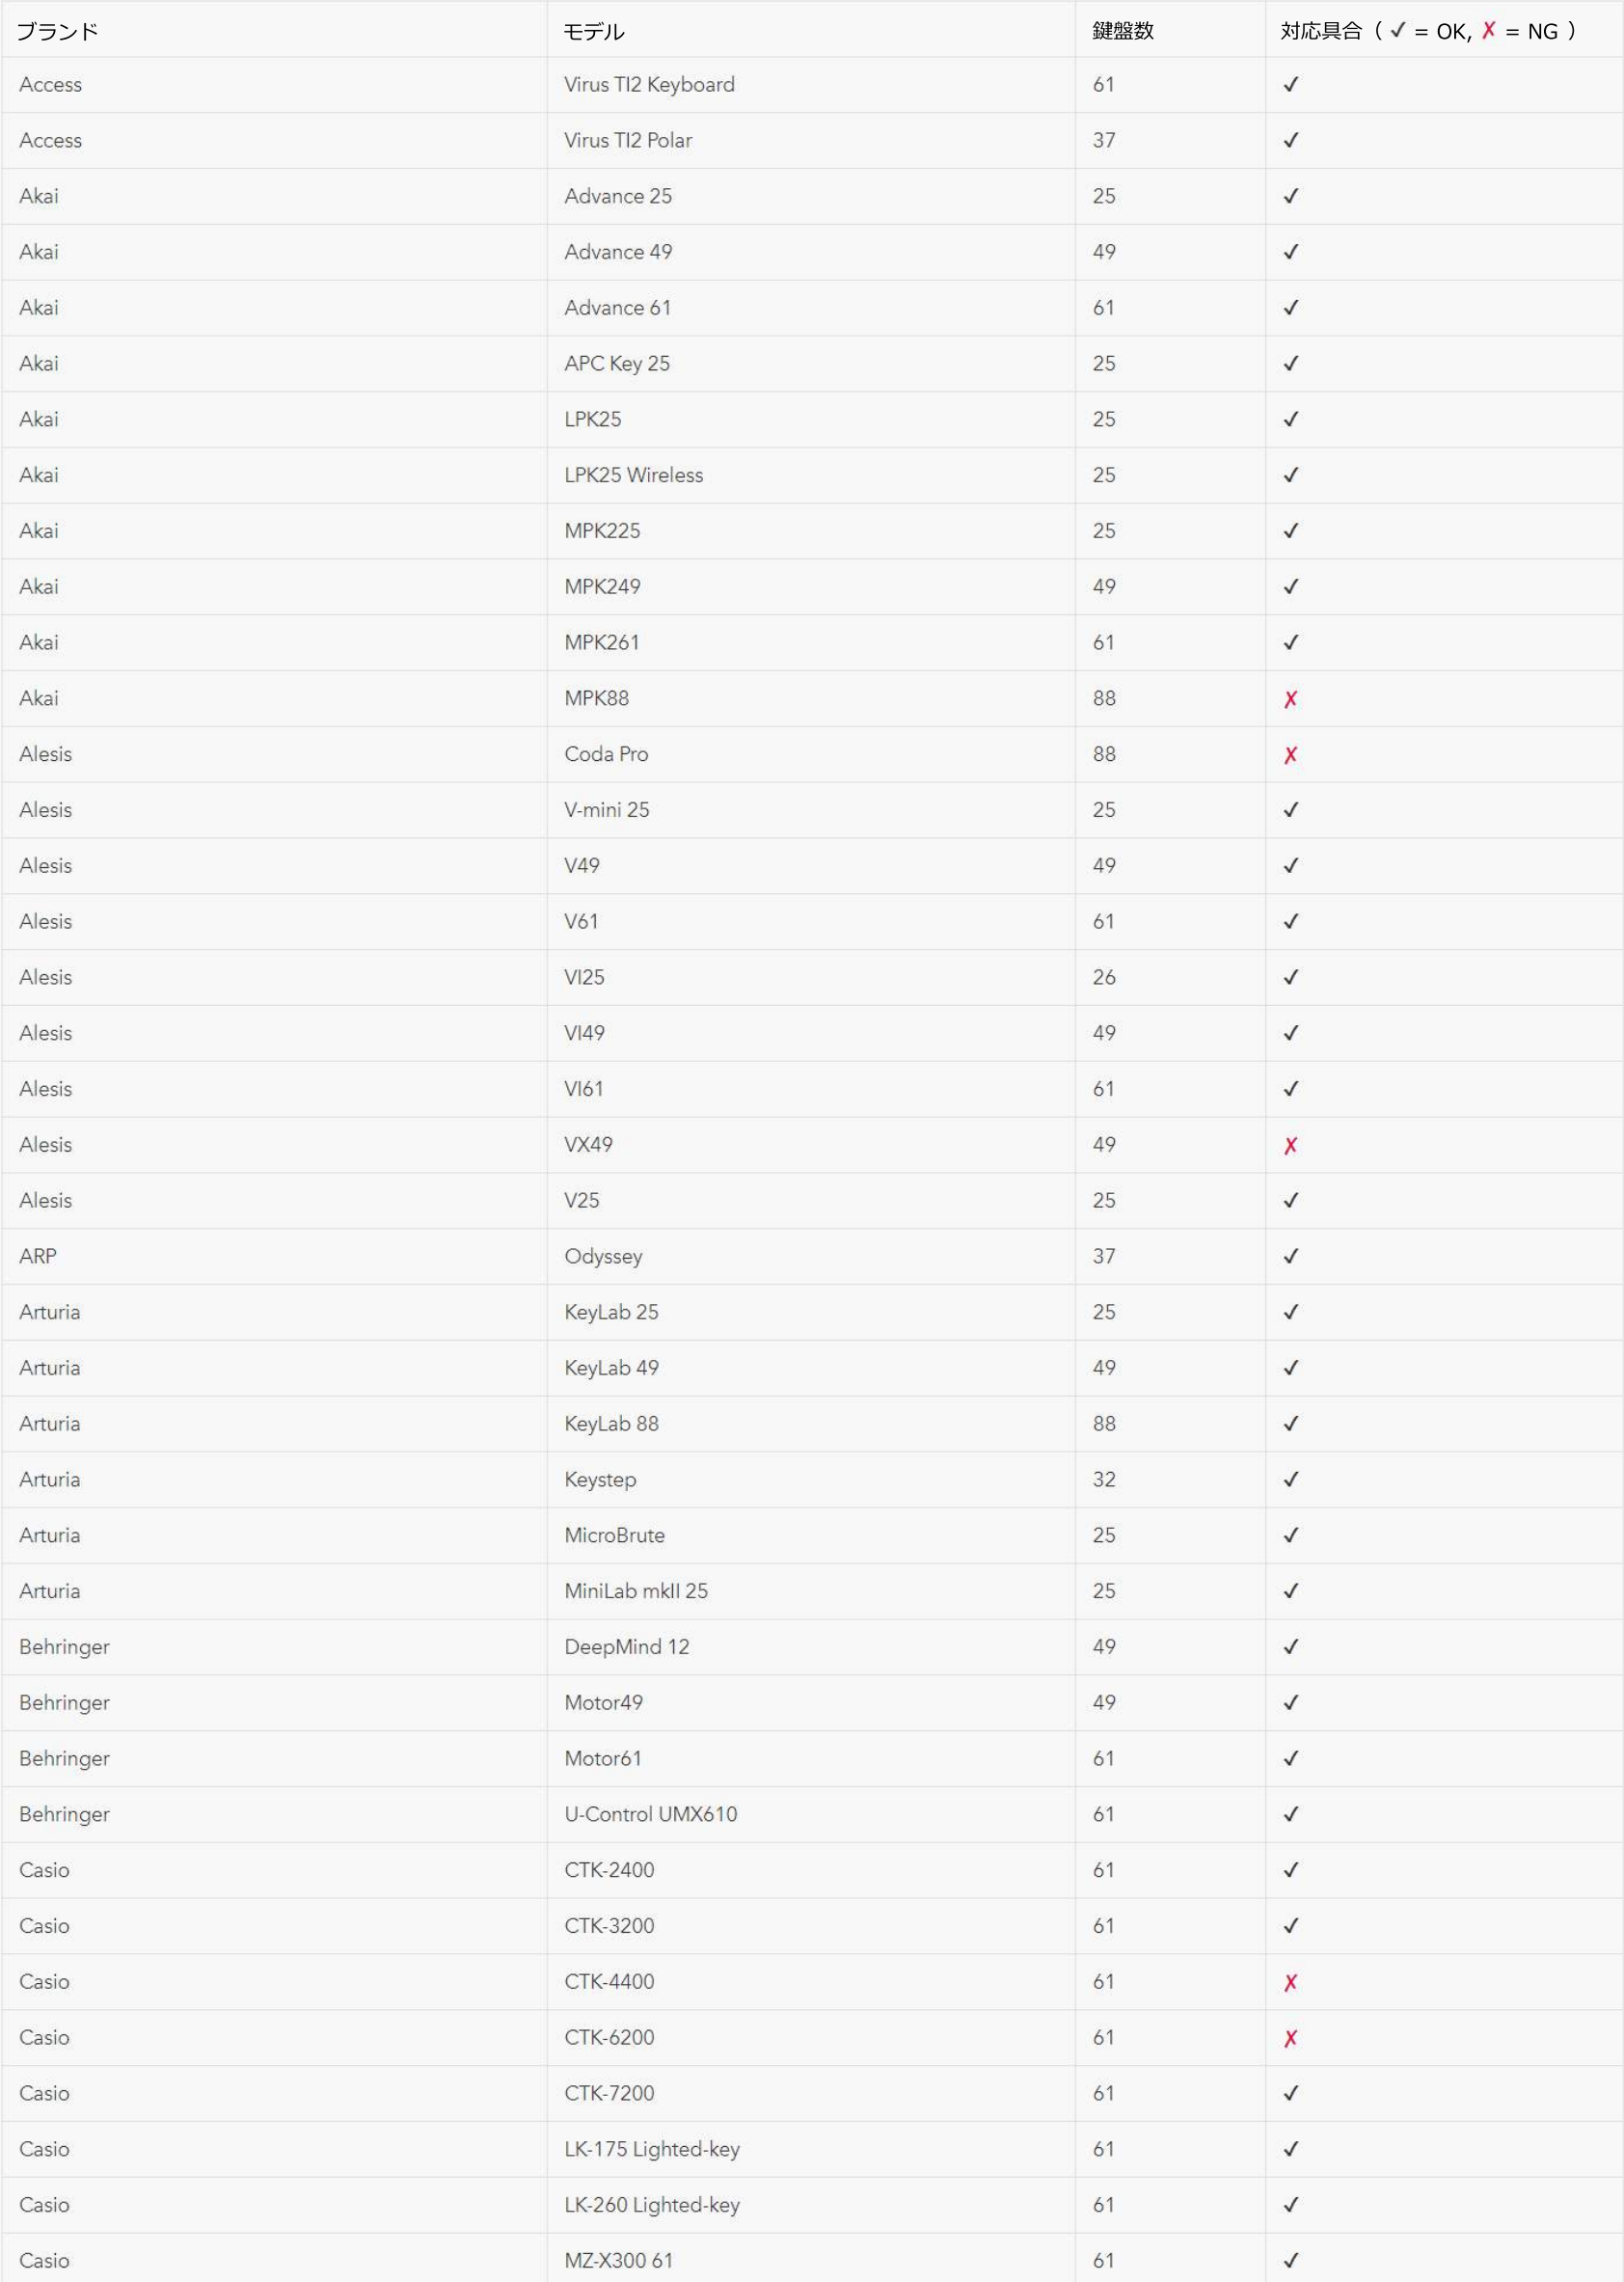

ブランド	モデル	鍵盤数	対応具合（✓ = OK, ✗ = NG ）
Access	Virus TI2 Keyboard	61	✓
Access	Virus TI2 Polar	37	✓
Akai	Advance 25	25	✓
Akai	Advance 49	49	✓
Akai	Advance 61	61	✓
Akai	APC Key 25	25	✓
Akai	LPK25	25	✓
Akai	LPK25 Wireless	25	✓
Akai	MPK225	25	✓
Akai	MPK249	49	✓
Akai	MPK261	61	✓
Akai	MPK88	88	✗
Alesis	Coda Pro	88	✗
Alesis	V-mini 25	25	✓
Alesis	V49	49	✓
Alesis	V61	61	✓
Alesis	VI25	26	✓
Alesis	VI49	49	✓
Alesis	VI61	61	✓
Alesis	VX49	49	✗
Alesis	V25	25	✓
ARP	Odyssey	37	✓
Arturia	KeyLab 25	25	✓
Arturia	KeyLab 49	49	✓
Arturia	KeyLab 88	88	✓
Arturia	Keystep	32	✓
Arturia	MicroBrute	25	✓
Arturia	MiniLab mkII 25	25	✓
Behringer	DeepMind 12	49	✓
Behringer	Motor49	49	✓
Behringer	Motor61	61	✓
Behringer	U-Control UMX610	61	✓
Casio	CTK-2400	61	✓
Casio	CTK-3200	61	✓
Casio	CTK-4400	61	✗
Casio	CTK-6200	61	✗
Casio	CTK-7200	61	✓
Casio	LK-175 Lighted-key	61	✓
Casio	LK-260 Lighted-key	61	✓
Casio	MZ-X300 61	61	✓

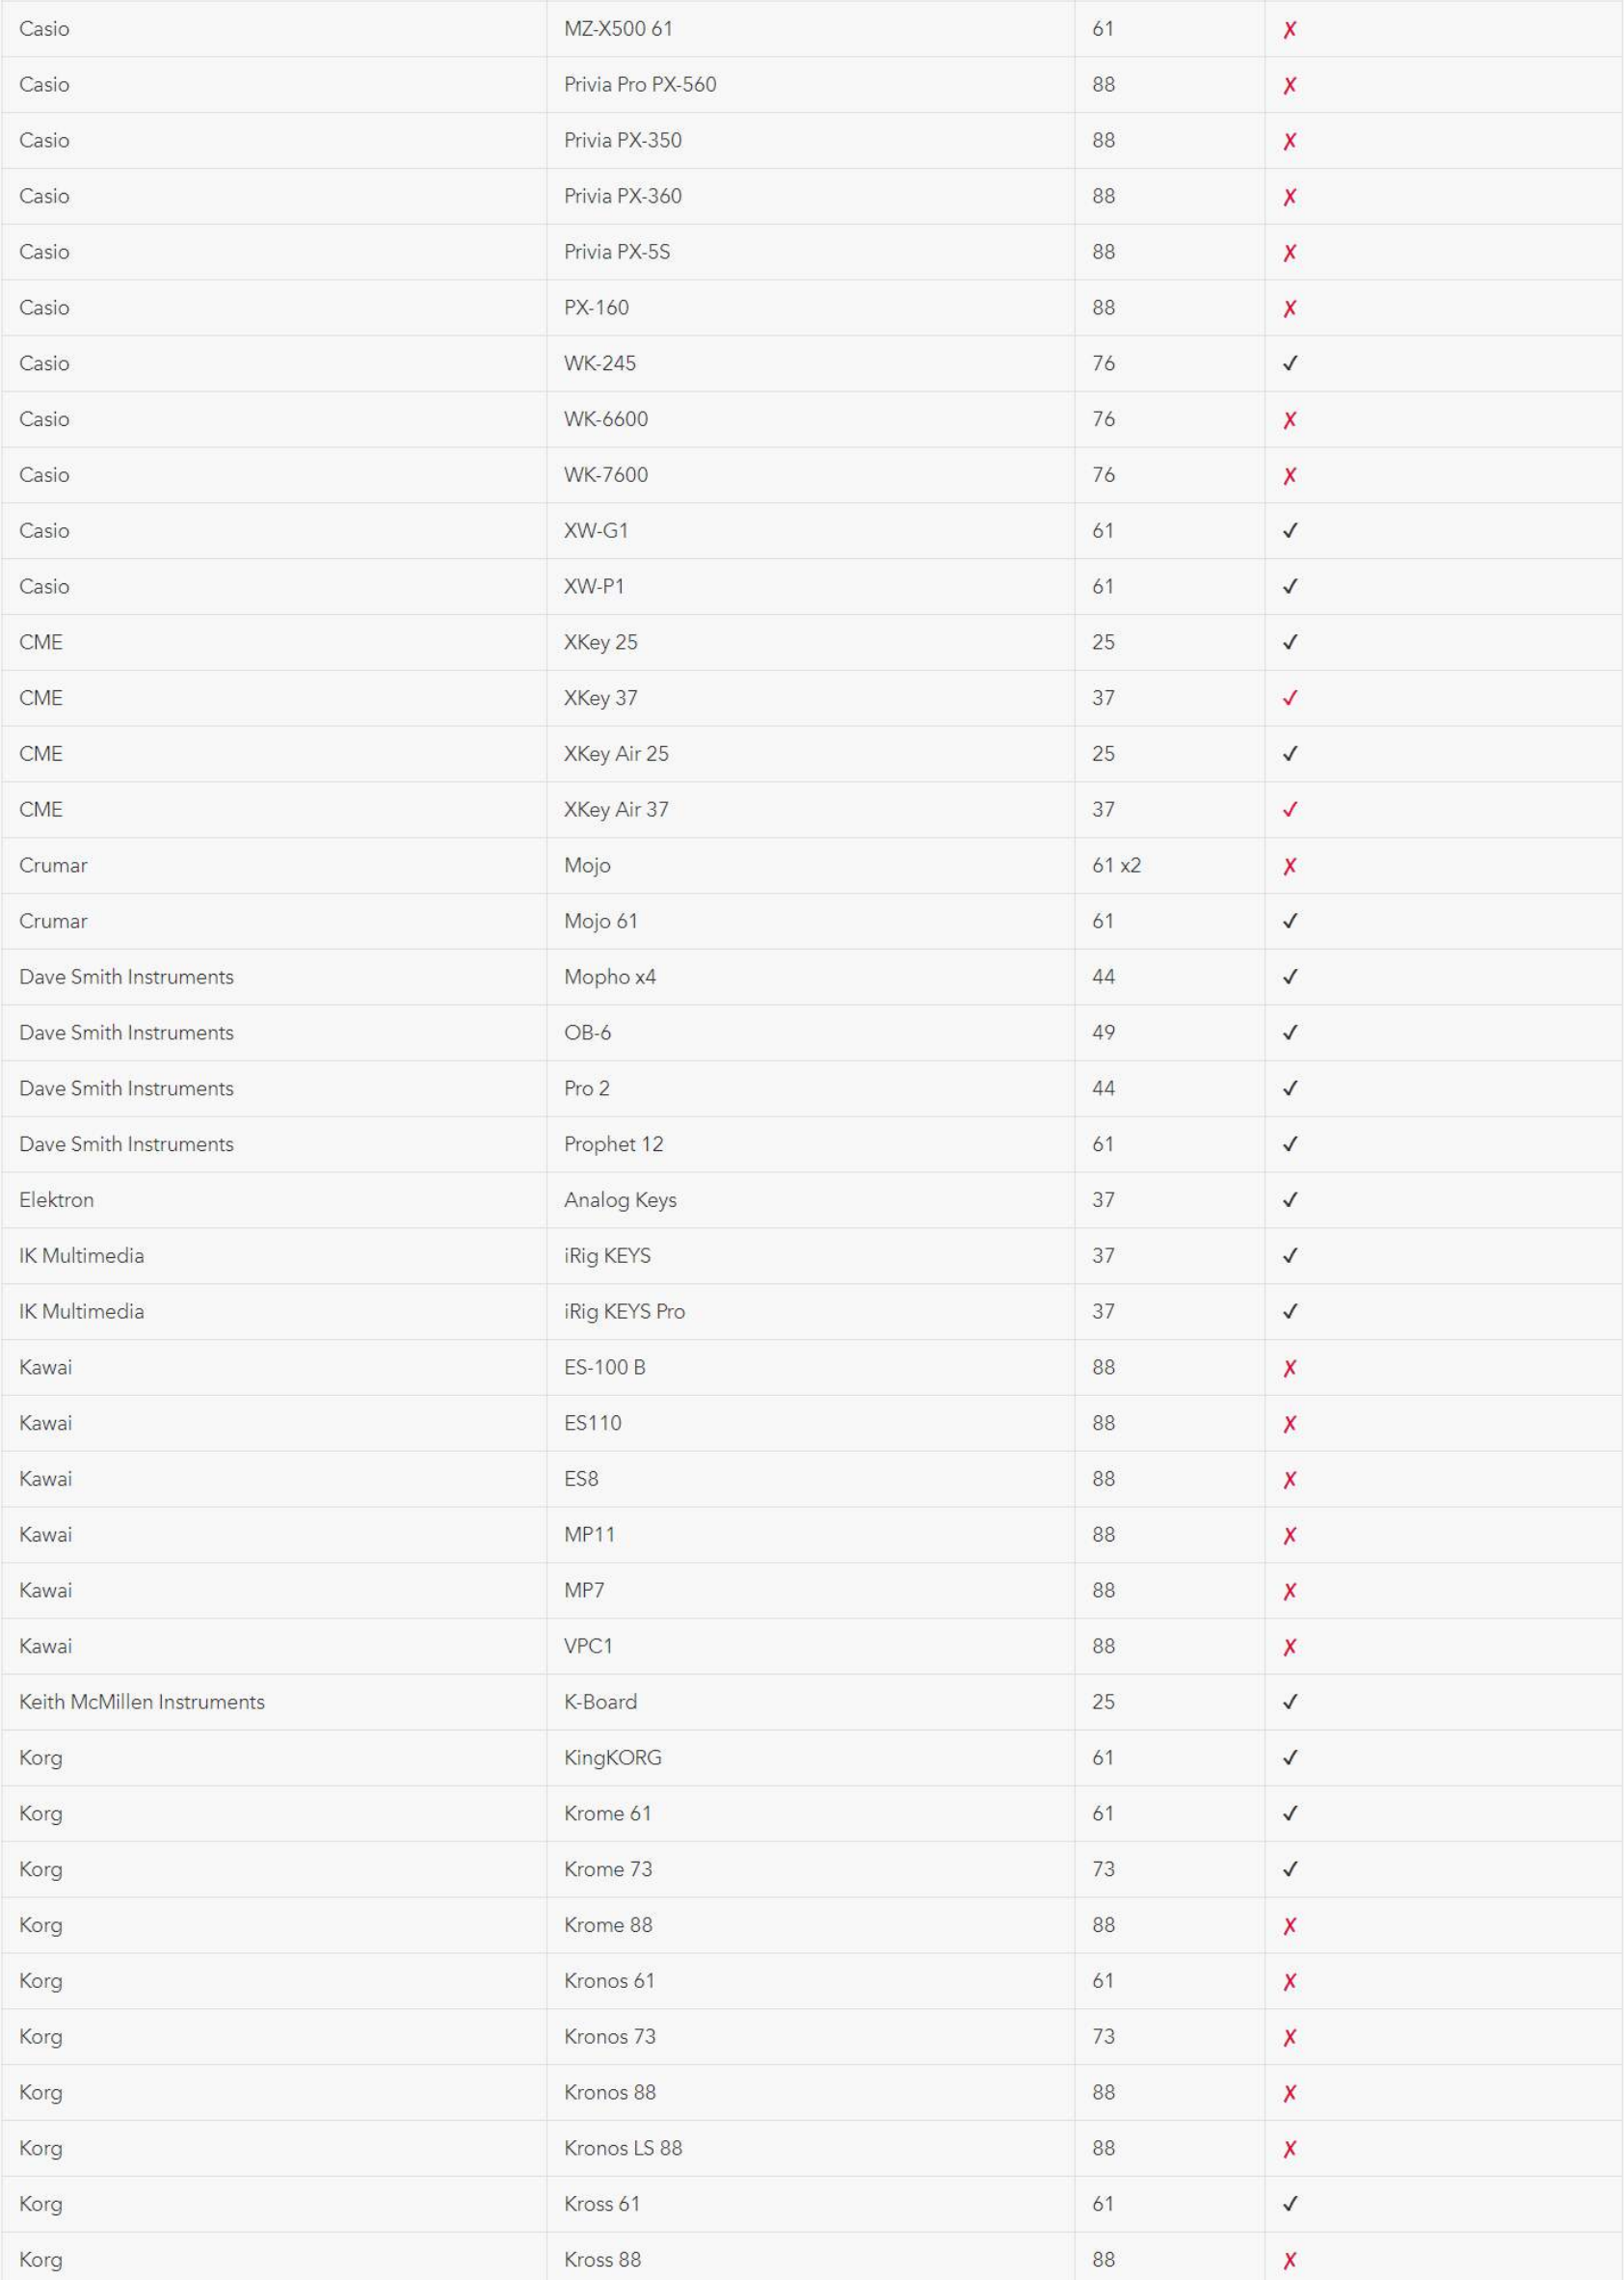

Casio	MZ-X500 61	61	✗
Casio	Privia Pro PX-560	88	✗
Casio	Privia PX-350	88	✗
Casio	Privia PX-360	88	✗
Casio	Privia PX-5S	88	✗
Casio	PX-160	88	✗
Casio	WK-245	76	✓
Casio	WK-6600	76	✗
Casio	WK-7600	76	✗
Casio	XW-G1	61	✓
Casio	XW-P1	61	✓
CME	XKey 25	25	✓
CME	XKey 37	37	✓
CME	XKey Air 25	25	✓
CME	XKey Air 37	37	✓
Crumar	Mojo	61 x2	✗
Crumar	Mojo 61	61	✓
Dave Smith Instruments	Mopho x4	44	✓
Dave Smith Instruments	OB-6	49	✓
Dave Smith Instruments	Pro 2	44	✓
Dave Smith Instruments	Prophet 12	61	✓
Elektron	Analog Keys	37	✓
IK Multimedia	iRig KEYS	37	✓
IK Multimedia	iRig KEYS Pro	37	✓
Kawai	ES-100 B	88	✗
Kawai	ES110	88	✗
Kawai	ES8	88	✗
Kawai	MP11	88	✗
Kawai	MP7	88	✗
Kawai	VPC1	88	✗
Keith McMillen Instruments	K-Board	25	✓
Korg	KingKORG	61	✓
Korg	Krome 61	61	✓
Korg	Krome 73	73	✓
Korg	Krome 88	88	✗
Korg	Kronos 61	61	✗
Korg	Kronos 73	73	✗
Korg	Kronos 88	88	✗
Korg	Kronos LS 88	88	✗
Korg	Kross 61	61	✓
Korg	Kross 88	88	✗

Korg	microARRANGER	61	✓
Korg	microKEY AIR 25	25	✓
Korg	microKEY AIR 37	37	✓
Korg	microKEY AIR 61	61	✓
Korg	microKEY2 37	37	✓
Korg	microKEY2 49	49	✓
Korg	microKEY2 61	61	✓
Korg	microKEY2 AIR	25	✓
Korg	microKEY25	25	✓
Korg	microKORG	37	✓
Korg	microKORG S	37	✓
Korg	microKORG XL+	37	✓
Korg	minilogue	37	✓
Korg	monologue	25	✓
Korg	MS-20 Mini Semi-modular	37	✗
Korg	nanoKEY	25	✓
Korg	nanoKEY Studio	25	✓
Korg	Pa4X-61	61	✓
Korg	Pa4X-61 Oriental	61	✓
Korg	Pa4X-76	76	✓
Korg	Pa4X-76 Oriental	76	✓
Korg	Pa600	61	✗
Korg	Pa600QT	61	✗
Korg	Pa900	61	✗
Korg	B1	88	✓
Korg	nanoKEY2	25	✓
Korg	nanoKEY2 37	37	✓
Korg	SV-1 73	73	✗
Korg	SV-1 88	88	✗
Kurzweil	Artis	88	✗
Kurzweil	Artis SE	88	✗
Kurzweil	Artis7	76	✓
Kurzweil	Forte	88	✗
Kurzweil	Forte 7	76	✗
Kurzweil	Forte SE	88	✗
Kurzweil	PC3A6	61	✓
Kurzweil	PC3A7	76	✓
Kurzweil	PC3A8	88	✗
Kurzweil	PC3K6	61	✓
Kurzweil	PC3K7	76	✓
Kurzweil	PC3K8	88	✗

Kurzweil	SP4-7	76	✓
Kurzweil	SP4-8	88	✗
Kurzweil	SP5-8	88	✗
M Audio	Keystation 88 II	88	✓
M-Audio	Axiom AIR Mini 32	32	✓
M-Audio	Code 25	25	✓
M-Audio	Code 49	49	✓
M-Audio	Code 61	61	✓
M-Audio	Keystation 49	49	✓
M-Audio	Keystation 61	61	✓
M-Audio	Oxygen 25	25	✓
M-Audio	Oxygen 49	49	✓
M-Audio	Oxygen 61	61	✓
Modal Electronics	001 2-Voice	37	✓
Modal Electronics	008	61	✓
Modal Electronics	Modulus.002	61	✓
Moog	953 Duophonic	61	✓
Moog	Minimoog Model D	44	✗
Moog	Sub 37	37	✗
Moog	Sub Phatty	25	✗
Native Instruments	Komplete Kontrol S25	25	✓
Native Instruments	Komplete Kontrol S49	49	✓
Native Instruments	Komplete Kontrol S61	61	✓
Native Instruments	Komplete Kontrol S88	88	✗
Nektar	Impact GX49	49	✓
Nektar	Impact GX61	61	✓
Nektar	Impact LX25+	25	✓
Nektar	Impact LX49+	49	✓
Nektar	Impact LX61+	61	✓
Nektar	Impact LX88+	88	✓
Nektar	Panorama P4	49	✓
Nektar	Panorama P6	61	✓
Nord	Electro 5 HP	73	✓
Nord	Electro 5D 61	61	✓
Nord	Electro 5D 73	73	✓
Nord	Lead 4	49	✓
Nord	Lead A1	49	✓
Nord	Piano 3	88	✓
Nord	Stage 2 EX 88	88	✓
Nord	Stage 2 EX Compact	73	✓
Nord	Stage 2 EX HP76	76	✗

Nord	Stage 3 88	88	✓
Nord	Stage 3 Compact	73	✓
Nord	Stage 3 HP76	76	✓
Novation	Bass Station II	25	✓
Novation	MiniNova	37	✓
Novation	UltraNova	37	✗
Novation	Impulse 25	25	✓
Novation	Impulse 49	49	✓
Novation	Impulse 61	61	✓
Novation	Launchkey 25	25	✓
Novation	Launchkey 49	49	✓
Novation	Launchkey 61	61	✓
Novation	Launchkey Mini	25	✓
Reloop	Keypad	25	✓
Roland	A-300 PRO	32	✓
Roland	A-49	49	✓
Roland	A-500 PRO	49	✓
Roland	A-800 PRO	61	✓
Roland	A-88	88	✗
Roland	BK-3	61	✗
Roland	BK-5	61	✗
Roland	Boutique Series K-25m	25	✓
Roland	E-A7	61	✗
Roland	FA-06	61	✓
Roland	FA-08	88	✗
Roland	FP-30	88	✗
Roland	FP-50	88	✓
Roland	FP-90	88	✗
Roland	GAIA SH-01	37	✓
Roland	GO:KEYS	61	✓
Roland	GO:PIANO	61	✗
Roland	JD-XA	49	✓
Roland	JD-Xi	37	✓
Roland	JUNO-DS61	61	✓
Roland	JUNO-DS88	88	✗
Roland	Jupiter-80	76	✗
Roland	RD-2000	88	✗
Roland	RD-300NX	88	✗
Roland	RD-64	64	✓
Roland	System-1	25	✓
Roland	System-8	49	✓

Roland	V-Combo VR-09	61	✓
Roli	Grand Stage	88	✓
Roli	Seaboard Grand Stage	61	✓
Roli	Seaboard Rise 25	25	✓
Roli	Seaboard Rise 49	49	✓
Samson	Carbon 49	49	✓
Samson	Carbon 61	61	✓
Samson	Graphite 49	49	✓
Sequential	Prophet-6	49	✓
Sledge 2.0	Sledge 2.0	61	✓
Studiologic	Numa Compact 2	88	✓
Studiologic	SL88 Grand	88	✓
Studiologic	SL88 Studio	88	✓
Teenage Engineering	OP-1	24	✓
Thomann	DP-26	88	✗
Tom Oberheim	Two Voice	37	✗
Waldorf	Blofeld Keyboard	49	✓
Yamaha	CP1	88	✗
Yamaha	CP300	88	✗
Yamaha	CP4 Stage	88	✗
Yamaha	CP40 Stage	88	✗
Yamaha	Montage 6	61	✗
Yamaha	Montage 7	76	✗
Yamaha	Montage 8	88	✗
Yamaha	MOXF6	61	✗
Yamaha	MOXF8	88	✗
Yamaha	MX49	49	✓
Yamaha	MX61	61	✓
Yamaha	P-115 B	88	✗
Yamaha	P-255	88	✗
Yamaha	P-45 B	88	✗
Yamaha	Piaggero NP-12	61	✓
Yamaha	Piaggero NP-32	76	✓
Yamaha	PSR-A3000	61	✗
Yamaha	PSR-E253	61	✓
Yamaha	PSR-E263	61	✓
Yamaha	PSR-E353	61	✓
Yamaha	PSR-E453	61	✗
Yamaha	PSR-EW400	76	✗
Yamaha	PSR-F51	61	✓
Yamaha	PSR-S670	61	✗
Yamaha	PSR-S770	61	✗
Yamaha	PSR-S970	61	✗
Yamaha	PSREW300	76	✓
Yamaha	Reface CP	37	✓
Yamaha	Reface CS	37	✓
Yamaha	Reface DX	37	✓
Yamaha	Tyros5 61	61	✗
Yamaha	Tyros5 76	76	✗
Yamaha	YPG-235	76	✗